

KOMET JEL[®] MGF XH MICRO M1-M2,5

Thread Milling into hardened steels between 45-60 HRC

KOMET JEL® MGF XH Micro M1-M2,5

Thread Milling into hardened steels between 45-60 HRC

Application:


- Hardened steels between 45-60 HRC
- Threads can be made directly in hardened components, e.g. aviation components, implants, etc.
- Complex re-machining due to hardening distortion can be avoided.
- Anti-clockwise cutting from M1 to M2.5

New: MFG XH Micro – thread milling and 90° countersinking of M1 – M2.5

Benefits for you:

- Thread milling directly into hardened materials
- Reduction in tool costs:
One tool for two processes; 90° countersinking & thread milling with a single tool
- CNC programs can be called up 24/7 from anywhere in the world*
- Multiple uses – thread milling and 90° countersinking, e.g. M1.1 and M1.2 are made with an M1 thread milling cutter


* CNC programs can be configured online at <http://tpt.kometgroup.com> or can be obtained on request from tel.: +49 (0) 711 78891-0.

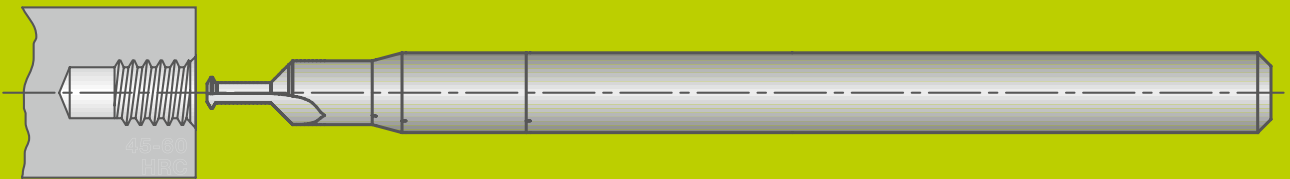

KOMET JEL® MGF XH Micro M1-M2,5 with rear chamfer, 1.5 × D



- For metric ISO thread DIN 13
- For hard machining of materials with hardness M45 HRC
- Shank \varnothing DIN 6535 Form HE/HA
- Tools without internal coolant supply
- Cutting material: solid carbide
- Tools are cutting counter clockwise

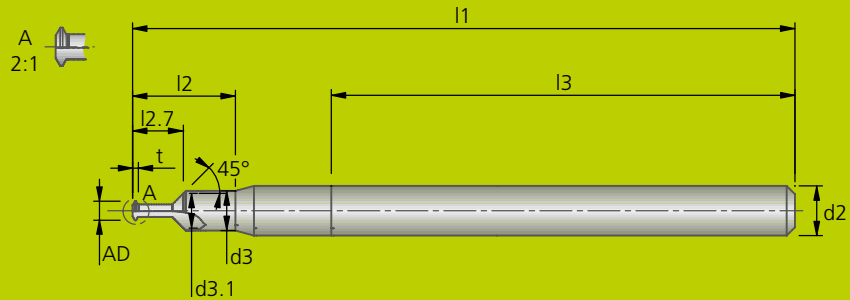

MGF XH 1,5×D												TiCN
Nominal \varnothing	t	Drill \varnothing	l1	l2.7	l2	l3	d2	d3.1	d3	AD	Z	Order No.
M1	0,25	0,75	40	2,1	5,2	28	3	1,5	1,8	< \varnothing 0,75	2	88977001000001
M1,4	0,30	1,10	40	2,6	5,7	28	3	1,7	2,0	< \varnothing 1,10	2	88977001000004
M1,6	0,35	1,25	40	3,1	6,0	28	3	2,1	2,4	< \varnothing 1,25	2	88977001000005
M2	0,40	1,60	40	3,7	*	28	3	2,6	3,0	< \varnothing 1,60	2	88977001000008
M2,2	0,45	1,75	40	3,9	*	28	3	2,5	3,0	< \varnothing 1,75	2	88977001000009
M2,5	0,45	2,05	40	4,5	*	28	3	2,9	3,0	< \varnothing 2,05	3	88977001000011

*d3=d2



GERMANY

KOMET GROUP GmbH
 Zeppelinstraße 3
 74354 Besigheim
 Tel. +49(0)7143.373-0
 Fax +49(0)7143.373-233
 info@kometgroup.com

GERMANY

KOMET Precision Tools GmbH & Co. KG
 Zeppelinstraße 3
 74354 Besigheim
 Tel. +49(0)7143.373-0
 Fax +49(0)7143.373-233
 info@kometgroup.com

GERMANY

KOMET JEL Precision Tools GmbH & Co. KG
 Ruppmannstraße 32
 70565 Stuttgart / Vaihingen
 Tel. +49(0)711.78891-0
 Fax +49(0)711.78891-11
 info@kometgroup.com

BRAZIL

Komet do Brasil Ltda.
 Rua Brasileira, 439
 07043-010 Guarulhos - São Paulo
 Tel. +55(0)11.6423-5502
 Fax +55(0)11.6422-0069
 info.br@kometgroup.com

CHINA

KOMET GROUP
 Precision Tools (Taicang) Co., Ltd.
 (Headquarter Asia Pacific)
 No. 5 Schaeffler Road
 Taicang, Jiangsu Province, 215400
 Tel. +86(0)512.535757-58
 Fax +86(0)512.535757-59
 info.cn@kometgroup.com

FRANCE

KOMET S.à.r.l.
 46-48 Chemin de la Bruyère
 B.P. 47
 69572 Dardilly CEDEX
 Tel. +33(0) 4 37 46 09 00
 Fax +33(0) 4 78 35 36 57
 info.fr@kometgroup.com

GREAT BRITAIN

KOMET (UK) Ltd.
 Unit 4 Triton Park
 Brownsover Road
 Swift Valley
 Rugby, CV21 15G
 Tel. +44(0)1788.5797-89
 Fax +44(0)1788.5797-90
 info.uk@kometgroup.com

INDIA

KOMET Precision Tools India Pvt. Ltd.
 121/B, Bommasandra Industrial Area
 BANGALORE - 560 099
 Tel. +91-80-27834821
 Fax +91-80-27834495
 info.in@kometgroup.com

ITALY

KOMET Utensili S.R.L.
 Via Menotti Serrati 74
 20098 S. Giuliano Mil.
 Tel. +39-02-98 40 28 1
 Fax +39-02-98 44 96 2
 info.it@kometgroup.com

JAPAN

KOMET GROUP KK
 2202-1 Ooyama Komaki city
 485-0026 Aichi
 Tel. +81(0)568-74-7331
 Fax +81(0)568-74-7332
 info.jp@kometgroup.com

MEXICO

KOMET de Mexico
 S. de R. L. de C.V
 Acceso „A“, No. 110
 Parque Industrial Jurica,
 76120, Queretaro, Qro. Mexico
 Tel. +52-442 2-18-25-44
 Fax +52-442 2-18-20-77
 info.mx@kometgroup.com

AUSTRIA

KOMET GROUP GmbH
 Wagramer Straße 173
 1220 Wien
 Tel. +43-1-2 59 22-04
 +43-1-2 59 22-12
 Fax +43-1-2 59 22 12-76
 info.at@kometgroup.com

POLAND

KOMET-URPOL Sp.z.o.o.
 ul. Stoczniewców 2
 47-200 Kdzierzyn-Kole
 Tel. +48-77-482 90 60
 Fax +48-77-406 10 70
 info.pl@kometgroup.com

RUSSIA

KOMET GROUP GmbH
 ul. Spartakovskaya, 2V
 420107, Kazan
 Tel. +7 843 5704345
 Fax +7 843 2917543
 info.ru@kometgroup.com

SWEDEN

Square Tools AB
 Box 9177
 20039 Malmö
 Tel. +46-40-49 28 40
 Fax +46-40-49 19 95
 info.se@kometgroup.com

SWITZERLAND

KOMET DIHART AG Precision Tools
 Industriestrasse 2
 4657 Dulliken
 Tel. +41(0)62.2854-200
 Fax +41(0)62.2854-202
 info.ch@kometgroup.com

CZECH REPUBLIC

KOMET GROUP CZ s.r.o.
 Na Hůrce 1041/2,
 160 00 Praha 6
 Tel. +42(0)2 35 01 00 10
 Fax +42(0)2 35 31 18 90
 info.cz@kometgroup.com

USA

KOMET of America, Inc.
 2050 Mitchell Blvd.
 Schaumburg
 IL 60193-4544
 Tel. +1-8 47-9 23 / 84 80
 +1-8 47-9 23 / 84 80
 Fax +1-8 00-8 65 / 66 38
 customerservice@komet.com

www.kometgroup.com

PRESENTED BY: